

INSTRUCTION FOR USE AND MAINTENANCE

**COOLING SHOWCASES
DROP-IN**



Instructions for use and maintenance

In compliance with European Directives

CE

The manufacturer assumes no responsibility for any modifications or technical changes in content or data contained in this user guide. This user guide applies to all cooling equipment supplied by Gastro Production Ltd.

Contents

1. Introduction.....	1
1.1 Orientation in the user guide	1
1.2 Explanation of symbols used in the user guide	2
2. Common Provisions	3
2.1 Transport and Unpacking.....	3
2.1.1 Transport	3
2.1.2 Unpacking	3
2.1.3 Dismantling and Disposal	3
2.2 Test protocols, Warranty Conditions	4
2.2.1 Testing.....	4
2.2.2 Warranty	4
2.3 Safety.....	5
2.3.1 Safety - electric current.....	5
2.3.2 Safety - mechanics	6
2.3.3 Safety - leaking substances.....	7
2.3.4 Safety - thermal effects.....	7
2.3.5 Safety – The refrigerants R290 and R600	7
2.3.6 Safety - other hazards	8
2.3.7 Proper use of Equipment.....	8
COOLING SHOWCASES DROP-IN.....	9
3. Technical Features	9
3.1.1 Technical Description of cooling showcases	9
3.1.2 Technical Description of Cooling showcases BH drop-in and DE	9
3.2 Dimensions and Weight	10
3.3 Type Labels	10
3.4.1 Technical Specifications of BH drop-in – GN	11

3.4.2 Technical Specifications of BH drop-in – EN.....	11
3.4.3 Technical Specifications of DE – GN	12
3.4.4 Technical Specifications of DE – EN.....	12
4. Installation and Operation.....	13
4.1 Setting the Equipment.....	13
4.2 Connecting to the electric network	14
4.3 Turning on the Equipment.....	14
4.4 Filling the equipment with goods.....	14
4.5 Operation of the Equipment	15
5. Electronic Control Unit.....	16
5.1 Description and Dimensions	16
5.2 Operating Mode - DIXELL.....	17
5.3 Operating Mode - CAREL	21
5.4 Programming Mode.....	24
6. Maintenance	24
6.1 General Safety Measures	24
6.2 Regular Maintenance	25
6.2.1 Inspection	25
6.2.2 Maintenance.....	28
6.2.2.1 Daily maintenance	28
7. Forbidden handling procedures	29
8. Table of possible malfunctions and their correcting	29
9. Inquiries	30
Appendix 1.....	31
Control unit – Wiring diagram.....	31
Appendix 2.1.....	32
Cooling showcase BH drop-in EN and GN (1x shelf) – Wiring diagram.....	32

Appendix 2.2.....	33
Cooling showcase BH drop-in EN and GN (2x shelf) – Wiring diagram.....	33
Appendix 2.3.....	34
Cooling showcase BH drop-in EN and GN (3x shelf) – Wiring diagram.....	34
Appendix 2.4.....	36
Cooling showcase BH drop-in - Technical drawing	36
Appendix 3.1.....	38
Cooling showcase DE – Wiring diagram.....	38
We are updating the wiring diagram to provide more detailed information. For any questions, please contact us.	38
Appendix 3.2.....	39
Cooling showcase DE - Technical drawing	39

1. Introduction

1.1 Orientation in the user guide

- This user guide has been designed so that the users can easily and quickly find the information necessary to manage the operation and maintenance of cooling equipment.
- The users should read the entire user guide with utmost attention and make sure they have perfectly understood all information contained in it.
- The user guide also serves for subsequent reference when needed. For this reason this user guide must be always available to the person operating the equipment.
- Searching this user guide is facilitated by the general table of contents, which allows immediately finding a specific location, and also by table of contents at the head of each section.
- In addition, next to some paragraphs, there are signs inserted to emphasize the importance of the information contained in those paragraphs, **which should be read with special attention.**

1.2 Explanation of symbols used in the user guide



Warning - Danger of electrical injury - refers to parts, where there is a danger of electrical injury. Read especially carefully.



Warning - Rotating parts - refers to parts, where there is a danger from rotating parts.



Warning – Risk of injury - refers to parts, where there is a risk of injury while touching the equipment in operation. Read especially carefully.



Warning - Important - refers to parts, where danger might occur, or to parts otherwise important. Read especially carefully.



Do not wash with pressurized water – it is forbidden to wash a part so indicated with pressurized water for risk of damaging the equipment.



Forbidden handling procedures – refers to parts, where there is a risk of damaging the equipment by handling it in a forbidden way.

2. Common Provisions

2.1 Transport and Unpacking

2.1.1 Transport

The client is obliged to check for the completeness and integrity of the packaging in which the equipment is transported, and seek compensation for potential damages caused during transport from the carrier in question. The equipment should be, if possible, transported onto the location designated for its operation in its original packaging.

2.1.2 Unpacking

After transporting the equipment on the location designated for its operation, remove all packaging.



Next remove all protective wrappings from outside and inside of the equipment. The consumer is obliged to dispose of all packaging in accordance with regulations valid in their respective countries!

2.1.3 Dismantling and Disposal

At the end of its service life, the equipment must be disposed of in accordance with regulations valid in the respective countries. The equipment contains:

- Stainless steel
- Nonferrous metals - Aluminium, Copper
- Glass
- PVC
- Methacrylate (PMMA)
- Polystyrol (PS)
- ABS
- Moplen
- Nylon
- Polyethylene
- Lubricating oil
- Coolant gas
- Polyurethane
- Electric motors
- Power supply cable, wiring material

2.2 Test protocols, Warranty Conditions

2.2.1 Testing

All equipment is factory tested in accordance with applicable laws, technical standards and government regulations. For all equipment, a test report documenting the tests performed is drawn up and kept at the factory. The equipment is sent to the customer completely ready for use. An exception is equipment placed in a more complex dispensing lines and assembled on-site.

2.2.2 Warranty



Thank you for using our products. Our company will adhere to the relevant provisions of our "Terms and Conditions" and provide you with appropriate services upon submission of the invoice. **We offer a 12-month warranty from the date of purchase (invoice issue date).**

During the warranty period, our company is responsible for free replacement parts and related services if there is a device malfunction or quality issue during proper operation.



The free services do not cover the following damages:

- Failure to provide an invoice or alteration of invoice details.
- Damage caused during transportation (it is necessary to inspect the condition of the goods upon receipt from the carrier), installation, or improper connection and handling.
- Damage to components caused by failure to provide power and voltage according to the specifications in the technical data.
- Damage caused by disassembly of the products, modification, or alteration of mechanical and electrical structures without permission.
- Damage caused by improper operation, cleaning, or maintenance.

- Non-human-caused damages such as damage caused by abnormal voltage, fire, building collapse, lightning, floods, and other natural disasters, as well as damage caused by rats and other pests.
- Failure to follow the operating instructions during use.
- Wearable and consumable parts.



If the following conditions are not met, the complaint will not be considered: How to proceed with a complaint for the fastest resolution:

- **Product identification** – by submitting the order, invoice, or inspection label.
- **Description of the defect** – describe as thoroughly as possible why the product is being claimed.
- **Attach photos or video** (used to assess the claim resolution and possibly propose repairs and ensure spare parts needed for the repair).
- **Customer's request** for claim resolution – repair (service) / return, etc.
- **Contact person** and address where the product is located.

2.3 Safety

2.3.1 Safety - electric current

The device is factory-fitted with a connecting cord for conducting the electric current, terminating in a non-detachable plug. This plug can be plugged into an outlet with voltage system 1, N, PE ~ 230V, 50Hz (an EURO socket with protective pin, a SHUKO socket with protective contacts).



Only qualified electricians are allowed to exchange the plug. The wiring of the equipment can be handled only by persons possessing electrotechnical qualification and only after the manufacturer's approval. Interfering with the wiring is dangerous to life and may cause electric injury!



It is forbidden to touch the power supply cord plug, the control panel and other electrical components with moist or wet hands, or to wash them with pressurized water. There is a danger of electric injury!



Before carrying out maintenance work, it is necessary to pull the power supply cord plug and to make sure no electric current is flowing through the equipment (e.g. by turning on the main power switch and observing if the equipment remains powered off). If the equipment is connected permanently to the mains, it is necessary to turn off the corresponding circuit breaker, make sure the equipment is not functioning and secure the deactivated circuit breaker, e.g. by putting an “equipment under maintenance” sign on it.

2.3.2 Safety - mechanics

While operating the equipment, special caution is necessary during following operations:

- When opening or closing the doors of cooling or freezing tables. The doors are spring loaded and parts of limbs may become caught in them.
- When opening the blinds covering the condenser. When acting carelessly, there is a danger of cutting oneself at the condenser lamellas.
- When handling the sliding glass doors of display cabinets, which, in order to ensure proper insulation, have a considerable weight. Rough handling may lead to their breaking up or falling out, possibly resulting in injury.
- When tilting the covering glass panels of display cabinets for maintenance. They have a considerable weight and may cause injury when falling out.
- When handling the glass shelves for displayed goods, an increased caution is necessary.



During the operation of the cooling unit, do not put your fingers or other objects through the condenser fan covers, the evaporator fan covers, or other fan covers. There is a risk of limb injury from rotating fan blades.

2.3.3 Safety - leaking substances

The coolant used does not pose any health risks.

2.3.4 Safety - thermal effects



During the operation of the cooling unit, the compressor body and the pipe ducts can reach considerably high temperatures – touching them may cause burns to the limbs. During the operation of the equipment, the condensate liquid evaporates from the evaporator tank. The tank and the heating bodies reach considerably high temperatures – touching them may cause burns to the limbs.

2.3.5 Safety – The refrigerants R290 and R600



We do not recommend handling the refrigerants R290 and R600 used in our cooling products. Any work involving these refrigerants should only be carried out by individuals with the necessary knowledge and qualifications. R290 is pure propane, and R600 is pure isobutane. These substances are highly flammable.

2.3.6 Safety - other hazards

The risk of overloading the glass shelves. The user must be aware, that the weight limit of shelves is 20kg. This risk is indicated by the “**max. 20kg**“ warning label.

2.3.7 Proper use of Equipment



- The equipment is designed for normal use by an adult.
- It is not designed for rough handling or operation by children! The operators of the equipment must be thoroughly and demonstrably trained in its operation and a user guide must be available to them.
- The equipment must be operated in accordance with the instructions for use. The equipment can be used only for purposes for which it is intended.
- Do not place the equipment next to heat sources or on places directly illuminated by sunlight.
- Before filling the equipment with goods, let it cool to the target temperature first.
- Do not place any hot or warm dishes into the refrigerated space.
- Do not place any acidic foods into the refrigerated space, as this may cause damage to the evaporator.
- Keep the refrigerated space clean.
- Do not leave the doors to the refrigerated space open – this reduces the equipment performance and lifetime.
- Regularly check the equipment and perform maintenance work according to this guide.

COOLING SHOWCASES DROP-IN

The equipment is able to operate properly under these conditions:

- Altitude up to 1000m above sea level
- Ambient temperature near the equipment in the range from 15°C to 25°C
- Relative humidity max. 60%
- The equipment is not placed in direct sunlight
- The equipment is not placed close to sources of heat (heaters, deep fryers, heating dispensing basins, frying plates, cooling units of other devices etc.)
- The equipment is not placed close to steam generating devices (heating dispensing basins, pasta heaters, convection ovens, etc.)

3. Technical Features

3.1.1 Technical Description of cooling showcases

Cooling showcases serve for cooling and preservation of foodstuffs that spoil at room temperature. These display cabinets are not permitted to be used for other purposes without express permission and eventual structural changes by Gastro Production s.r.o. These display cabinets have been designed for best results provided that all instructions contained in this user guide are followed. For the display cabinets to be used in the best way possible and to be always kept in perfect condition, we recommend that you perform the maintenance work regularly. The personnel operating the display cabinets must be necessarily familiarised with instructions regarding to operation, maintenance and safety, as contained in this user guide. The display cabinets utilize forced circulation of cooled air.

3.1.2 Technical Description of Cooling showcases BH drop-in and DE

This type of display cabinets is designed to be drop-in the worktable top and has stainless steel structure with aggregate under the display case. The control panel with a control unit can be fastened in up to 2m distance from the cooling unit. Glass from all sides of the display cabinet enables an ideal visual offer of goods. Accessible only by the service. The glass with anti-tilt front using a stainless steel chain on the

customer's side. This function allows the glass to be folded down for easy cleaning of the inside of the display case. Stainless steel structure with insulated glazing. You can choose the number of height-adjustable shelves (one, two or three shelves), which depends on the total height of the Cooling showcase.


The Cooling showcases BH drop-in are EN (the lower part is used for trays) and GN (the lower part is used for GN trays or tubs). The temperature of the refrigerated space (BH) is adjustable **from 3°C to 8°C**. The Cooling showcases DE are EN (the lower part is used for EN trays) and GN (the lower part is used for GN tubs). The temperature of the refrigerated space (DE) is adjustable **from 3°C to 8°C**.

3.2 Dimensions and Weight

Dimensions and weight of the equipment can be found according to the type of equipment at www.gastro.cz.

3.3 Type Labels

The type label is placed on the inner side of the cooling unit chamber. Illustrative example.

		www.gastro.cz		CZ
				CE
No :	C.0001.02.15			
		Type :		
Cooling perform. :	0,28 kcal/h	Δ T	-25 °C	
Input P :	0,52 kW			
Voltage system :	1,N,PE ~ 230V,50Hz			
Current load I _v :		2,9 A		
Weight :	kg	Climatic class "N"		
Refriger.:	R404a	Amount	0,5 kg	

3.4.1 Technical Specifications of BH drop-in – GN

	<i>2GN 1x shelf</i>	<i>2GN 2x shelf</i>	<i>2GN 3x shelf</i>	<i>3GN 1x shelf</i>	<i>3GN 2x shelf</i>	<i>3GN 3x shelf</i>
Temperature	+3°C ~ +8°C					
Cooling gas	R290					
Power output at T - 10°C	0,65kW	0,8kW	0,8kW	0,8kW	0,9kW	0,9kW
Power input	0,5kW	0,7kW	0,7kW	0,7kW	0,75kW	0,75kW
Voltage	1,N,PE~230V,50Hz					

	<i>4GN 1x shelf</i>	<i>4GN 2x shelf</i>	<i>4GN 3x shelf</i>
Temperature	+3°C ~ +8°C		
Cooling gas	R290		
Power output at T - 10°C	0,9kW	1,1kW	1,1kW
Power input	0,75kW	0,85kW	0,85kW
Voltage	1,N,PE~230V,50Hz		

3.4.2 Technical Specifications of BH drop-in – EN

	<i>1EN 1x shelf</i>	<i>1EN 2x shelf</i>	<i>1EN 3x shelf</i>	<i>2EN 1x shelf</i>	<i>2EN 2x shelf</i>	<i>2EN 3x shelf</i>
Temperature	+3°C ~ +8°C					
Cooling gas	R290					
Power output at T - 10°C	0,6kW	0,6kW	0,6kW	0,65kW	0,9kW	0,9kW
Power input	0,45kW	0,45kW	0,45kW	0,45kW	0,75kW	0,75kW
Voltage	1,N,PE~230V,50Hz					

	<i>3EN 1x shelf</i>	<i>3EN 2x shelf</i>	<i>3EN 3x shelf</i>	<i>4EN 1x shelf</i>	<i>4EN 2x shelf</i>	<i>4EN 3x shelf</i>
Temperature	+3°C ~ +8°C					
Cooling gas	R290					
Power output at T - 10°C	0,9kW	1,1kW	1,1kW	0,9kW	1,1kW	1,1kW
Power input	0,75kW	0,9kW	0,9kW	0,75kW	0,9kW	0,9kW
Voltage	1,N,PE~230V,50Hz					

3.4.3 Technical Specifications of DE – GN

	<i>2GN 1x shelf</i>	<i>2GN 2x shelf</i>	<i>2GN 3x shelf</i>	<i>3GN 1x shelf</i>	<i>3GN 2x shelf</i>	<i>3GN 3x shelf</i>
Temperature	+3°C ~ +8°C					
Cooling gas	R290					
Power output at T - 10°C	0,65kW	0,9kW	0,9kW	0,9kW	1,1kW	1,1kW
Power input	0,5kW	0,75kW	0,75kW	0,75kW	0,9kW	0,9kW
Voltage	1,N,PE~230V,50Hz					

	<i>4GN 1x shelf</i>	<i>4GN 2x shelf</i>	<i>4GN 3x shelf</i>
Temperature	+3°C ~ +8°C		
Cooling gas	R290		
Power output at T - 10°C	1,1kW	1,2kW	1,2kW
Power input	0,9kW	0,95kW	0,95kW
Voltage	1,N,PE~230V,50Hz		

3.4.4 Technical Specifications of DE – EN

	<i>1EN 1x shelf</i>	<i>1EN 2x shelf</i>	<i>1EN 3x shelf</i>	<i>2EN 1x shelf</i>	<i>2EN 2x shelf</i>	<i>2EN 3x shelf</i>
Temperature	+3°C ~ +8°C					
Cooling gas	R290					
Power output at T - 10°C	0,65kW	0,9kW	0,9kW	0,9kW	1,1kW	1,1kW
Power input	0,5kW	0,75kW	0,75kW	0,75kW	0,9kW	0,9kW
Voltage	1,N,PE~230V,50Hz					

	<i>4EN 1x shelf</i>	<i>4EN 2x shelf</i>	<i>4EN 3x shelf</i>
Temperature	+3°C ~ +8°C		
Cooling gas	R290		
Power output at T - 10°C	1,1kW	1,2kW	1,2kW
Power input	0,9kW	0,95kW	0,95kW
Voltage	1,N,PE~230V,50Hz		

4. Installation and Operation

4.1 Setting the Equipment



Always proceed carefully and slowly when handling the equipment to avoid damage or injury! Consider the weight of the equipment. Ideally, four people are required to handle the equipment. After unpacking, place the equipment in a horizontal position at the designated location. For equipment with a aggregate, it is essential to ensure that it is not damaged.

Before inserting the equipment, make sure the area around the opening designated for installation is free of debris. Slowly and carefully insert the device into the prepared opening. You can use a temporary carrier made of sturdy straps, ropes, or planks, depending on the available movement and the size of the room.

Check that everything fits securely on the surface and is stable. Once confirmed, you can turn on the device. A seal is included with the product to prevent any leaks of cold air and moisture.



Warning! Ensure that the equipment is positioned so that the condenser is accessible, as it needs to be cleaned regularly. When installing the equipment into custom furniture, ensure that there is adequate airflow at the level of the unit through perforations in the furniture.

4.2 Connecting to the electric network

The device is factory-fitted with a connecting cord for conducting the electric current, terminating in a non-detachable plug. This plug can be plugged into an outlet with voltage system 1, N, PE ~ 230V, 50Hz (an EURO socket with protective pin, a SHUKO socket with protective contacts). Insert the plug of the connecting cord into the outlet. Ensure that the plug remains accessible to the operator. The cord cable must be laid out visibly and without any sharp bends. The cord cable must not be laid out across sharp edges of any sheet metal or other components.

4.3 Turning on the Equipment



After positioning the equipment, wait at least 30 minutes before turning it on. During the winter months, wait 12 hours at room temperature.

Turn on the equipment by setting the main power switch to **position 1**. **The indicator light should come on.** For setting the temperature of the refrigerated space on the electronic control unit, refer to section 5.

4.4 Filling the equipment with goods

After the refrigerated space reaches the target temperature, you may fill it with goods. **Please follow the principles of proper use of equipment.**



- **Do not place any hot or warm dishes into the refrigerated space.**
- **Do not place any acidic foods into the refrigerated space, as this may cause damage to the evaporator.**

4.5 Operation of the Equipment



- **Keep the refrigerated space clean.**
- **Do not leave the doors to the refrigerated space open – this reduces the equipment performance and lifetime.**
- **Regularly check the equipment and perform maintenance work according to section 6 of this user guide.**

5. Electronic Control Unit

The Cooling showcase is controlled by DIXELL and CAREL.

The Cooling showcase can be controlled by a DANFOSS thermostatic valve that controls the temperatures. Based on this data, it lets in warm or cooled air.



The manufacturer takes no responsibility for any equipment malfunction resulting from interfering with the electronic control unit settings. This provision does not apply to settings permitted by this user guide.

5.1 Description and Dimensions

DIXELLS are electronic thermostats with passive defrosting. They are fitted with a microprocessor and are suitable for refrigeration applications at normal temperatures. They are suitable for mounting on panels and their dimensions are 32x74 mm. They have one, two or three relay outputs to control compressor, fan, defrosting, lighting. It is possible to connect up to three PTC or NTC sensors to them.

Technical parameters

Wrapping: **self-extinguishing plastic ABS**

Case: **front panel: 32 x 74mm, depth: 60mm**

Mounting: **into the panel with cut-out aperture of 71 x 29mm**

Front panel cover: **IP65**

Attachment: **barrier strip for conductors with up to 2.5mm² cross section.**

Supply voltage: **230V~, ±10%; 50, 60Hz**

Input power: **3VA max**

Data memory: **EEPROM**

Working temperature range: **0 to 60°C**


Temperature range for storage: **-30 to 85°C**

Relative humidity: **20 to 85%**






Accuracy (at ambient temperature of 25°C): **±0,7°C±1 digit**

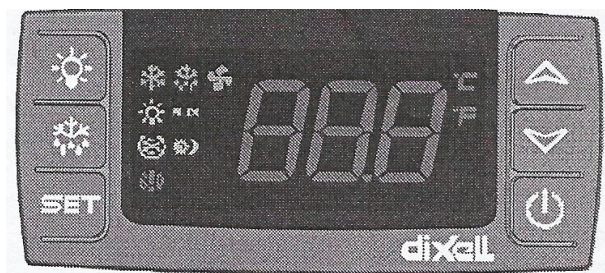5.2 Operating Mode - DIXELL





FRONT PANEL COMMANDS:









Button description

SET	<i>Displays the desired value. In programming mode serves for selecting a parameter or confirming an operation.</i>
	<i>(UP): Displays maximum temperature recorded. In programming mode serves for navigating the parameter list and increasing the displayed value.</i>
	<i>(DOWN): Displays minimum temperature recorded. In programming mode serves for navigating the parameter list and decreasing the displayed value.</i>
	<i>Turns the device on and off.</i>
	<i>Turns the lighting on and off, if available.</i>
	<i>(DEF): Initiates manual defrost.</i>



Key combinations

 	<i>Locks and unlocks the keyboard.</i>
SET 	<i>Enters the programming mode.</i>
SET 	<i>Returns to displaying the value of the refrigerated space temperature.</i>



Explanation of LED functions

	Lit up - Compressor running Flashing - Compressor minimum cycle delay
	Lit up - Defrosting in progress Flashing - Dripping in progress
	Lit up - Fans running Flashing - There is a time delay for the fans to switch on during defrost
	Lit up - Alarm
	Lit up - A continuous cooling cycle is in progress
	Lit up - Energy saving cycle
°C / F	Lit up - Measured units Flashing - Programming mode

Displaying minimum recorded temperature

1. Press the  button.
2. A "Lo" message appears on the display followed by minimum recorded temperature.
3. After another pressing of the  button or a 5s wait the device returns to normal mode of operation displaying the measured temperature.

Displaying maximum recorded temperature

1. Press the  button.
2. A "Hi" message appears on the display followed by maximum recorded temperature.
3. After another pressing of the  button or a 5s wait the device returns to normal mode of operation displaying the measured temperature.

Resetting the recorded MIN. / MAX. temperatures



1. While viewing either of the MIN. / MAX. temperatures, press the **SET** button for more than 3s, until the "rSt" message appears.
2. Confirm the operation by again pressing the **SET** button. The "rSt" starts flashing. The device resumes displaying the current temperature.

MAIN FUNCTIONS

Displaying the Target Temperature

1. Shortly press the **SET** button. The device displays the target temperature.
2. To again display the current temperature, shortly press the **SET** button again or wait 5s.



Setting the Target Temperature

1. Hold the **SET** button for more than 2s.
2. The device starts displaying the target temperature and the °C warning light starts flashing.
3. The target temperature can be adjusted by pressing the  or  buttons (within 10s interval).
4. The new target temperature is confirmed either by again pressing the **SET** button or automatically after 10s interval.



Initiating Manual Defrost

1. Press and hold the  for more than 2s.



Locking the Keyboard

1. Hold the  +  buttons simultaneously for at least 3s.
2. The **"POF"** message appears and the keyboard is locked. Now it is only possible to see the target temperature or the MIN. / MAX. recorded temperature.
3. Upon pressing any key for more than 3s, the **"POF"** message appears.



Unlocking the Keyboard again

1. Hold the  +  buttons simultaneously for at least 3s, until the **"PON"** message appears.

The Continuous Cycle

1. Unless there is defrost in progress, it is possible to initiate the continuous cycle by pressing the  button for more than 3s. The compressor enters the continuous cycle and operates to maintain the CCS setpoint for the time set through the CCt parameter. The cycle can be terminated before the end of the set time by pressing the  button for more than 3s.

The ON/OFF Function

1. The device can be turned off by pressing the  button. The **"OFF"** message appears. In this configuration, the regulation is disabled. To switch the controller on, again press the  button.








WARNING! - Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the controller is in stand-by mode.





5.3 Operating Mode - CAREL

FRONT PANEL COMMANDS:




Button description:


Set point / Up arrow 	Lit up - Increase value - Scroll menu - Direct access to change
Program 	Lit up - Pressed briefly - enter menu branch - save value and return to the parameter code - Pressed and held 3 sec. - enter programming mode - return to the previous level
On-Off / Down arrow 	Lit up - Unit ON - Decrease value - Scroll menu - Switch unit on and off
Defrost 	Lit up – Active / Can be deactivated from the keypad Flashing – Waiting / Can be activated from the keypad
Continuous cycle 	Lit up – Active / Can be deactivated from the keypad Flashing – Waiting / Can be activated from the keypad
Lights 	Lit up – Active / Can be deactivated from the keypad Flashing – Waiting / Can be activated from the keypad
Compressor 	Lit up – Active Flashing – Waiting

Evaporator fan 	Light up - Active
Clock 	Light up – Sheduler active
HACCP 	Light up - Active HACCP alarms
°C C	Light up – Unit of measure °C
°F F	Light up – Unit of measure °F
Service Maintenance 	Light up - Active alarms



Fan speed setting

- Once the keyboard is unlocked it's possible to press the button  to switch the fan speed, following the progression:

Press progression:	0	1	2	3	4	5
Fan status:	OFF	ON	ON	ON	ON	OFF
% Output:	0%	25%	50%	75%	100%	0%

- When selecting fan speed, display will show selected speed and after 3 seconds without button pressing, the screen will go back to main screen. However, all parameters referred to the fan management are always respected.
- All logics for the **"ON/OFF"** fan management are still present and respected. When fan is activated, the default speed will be 50%. After that the user can manually modify it with the button .

Setting the temperature value

1. Press to 1 second , after a few seconds the set value will start flashing.
2. Use *UP* or *DOWN* to increase or decrease this value.
3. Press  to confirm the new value.

Manual Defrosting

1. Press *DOWN* for more than 3 seconds (it is activated only if the temperature condition is met).

The continuous cycle

1. Press *UP+DOWN* for more than 3 seconds (it is activated only if the temperature condition is met).
2. The continuous cycle makes it possible to maintain active and continuous cooling in the freezer box or cooling counter, regardless of the internal temperature of the unit. It can be useful to achieve a rapid temperature drop even below the set point value.

Turning on the device

1. Press *UP* for more than 3 seconds. „*ON*“ will appear on the display when the button is pressed.

Turning off the device

Press *UP* for more than 3 second. Switching off is confirmed by displaying the message „*OFF*“ on the display alternately with the temperature measured by the set probe.

5.4 Programming Mode



Activating the programming mode is allowed only to servicing organisations with permission from the manufacturer.

6. Maintenance

6.1 General Safety Measures



Before commencing maintenance, study this user guide thoroughly.

Follow the instructions contained in section **2.3 Safety**.



Before carrying out maintenance work, it is necessary to pull the power supply cord plug and to make sure no electric current is flowing through the equipment (e.g. by turning on the main power switch and observing if the equipment remains powered off).

If the equipment is connected permanently to the mains, it is necessary to turn off the corresponding circuit breaker, make sure the equipment is not functioning and secure the deactivated circuit breaker, e.g. by putting an “equipment under maintenance” sign on it.

During maintenance work, proceed with caution and without haste.



- Do not use pressurized water for washing the equipment, there is a risk of damage to ventilator fans, compressor, electronic components and to the whole equipment as a consequence!
- To clean the equipment use a common kitchen detergent approved for use with foodstuffs!
- It is forbidden to pour water into the cooling basin of the display cabinet. The drain pipe is intended only for discharging the condensate liquid. Pouring water into the basin would result in overflowing of the evaporator basin for the condensate liquid, possibly damaging the cooling unit!

6.2 Regular Maintenance

6.2.1 Inspection

6.2.1.1 Evaporator



- Grab one of the sliding doors (*number in the technical drawings – 7. (BH) and 6. (DE)*) on both sides, and with a slow upward movement, “snap” it out. Then, by tilting the door towards you, you can remove the door. Repeat this process for the other door.
- Next, gently lift the glass from the shelves from below. The next step is to remove the boards under which the evaporator is located (*number in the technical drawings – 4. (BH) and 3. (DE)*). The evaporator can be tilted out.
- If possible, lift the glass ceiling of the showcase from the customer's side (when holding the front glass) by tilting the front glass and gently lifting and removing it. This front glass will be equipped with a chain to prevent it from tipping over, so just unhook it.
- **Be extra cautious when handling glass during these tasks, and proceed with the utmost care, as there is a risk of breakage and subsequent injury.**

6.2.1.2 Evaporator fans


- Check manually that the evaporator fans move freely. Have any immobile fans replaced.

6.2.1.3 Compressor

- Remove the covering blind of the cooling unit (*number in the technical drawing – 1. (BH and DE) in the aggregate assembly*) by first lifting it gently upward, then sliding its lower part out and removing it completely.
- Remove any deposited dust from the compressor (*number in the technical drawing – 1. (PB, KE and SUSHI) in the stand assembly and 13. (BH)*) by or using a compressed air blower.
- From the vicinity of the compressor, remove any undesirable material that would obstruct the free flow of air.

6.2.1.4 Condenser

- Check that there are no dust deposits or other particles on the condenser lamellas (*number in the technical drawing – 1. (BH and DE) in the aggregate assembly*). **While pointing a flashlight towards the lamellas, you should be able to see through them!**
- Remove any eventual impurities with a brush or a compressed air blower.

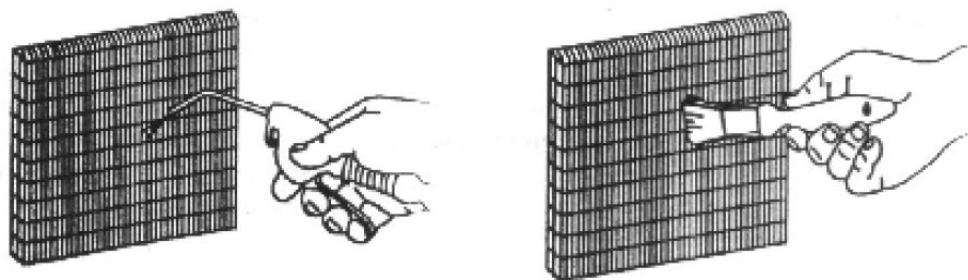



- If it is not possible to clean the condenser, contact a servicing organisation. The condenser needs to be replaced, failing to do so would result in destruction of the whole cooling unit.
- **Use increased caution during cleaning, there is a danger of cutting oneself at the condenser lamellas.**
- **If the condenser fan is readily accessible, check manually that the fan rotates freely. If the fan is inaccessible, it is necessary to check that the fan is functioning correctly during operation, in the following way: Provided that the condenser is clean, put an A4 sheet of paper against the front side of the condenser while the cooling unit is in operation. The sheet of paper should cling firmly to it and not fall off.**

6.2.1.5 Sealing surfaces

- Check all rubber sealing on doors, drawers, etc. Replace all damaged sealing.

6.2.1.6 Lighting

- Ascertain visually that the Perspex covers of the lights (*LED lighting is located under each glass shelf*) are not damaged. Have any damaged covers replaced by a servicing organisation.

6.2.1.7 Hinges, sliding surfaces

- Check that all hinges rotate freely and are properly spring-loaded.
- Also check that all hinges are properly attached and do not show signs of deformation.
- Check that sliding surfaces move freely without snagging.
- **Do not lubricate the hinges or sliding surfaces with any petroleum jelly or oils!**
- Have any faulty hinges or sliding surfaces replaced by a servicing organisation.

6.2.1.8 Ventilation apertures

- Ensure that all ventilation apertures are unobstructed and clean. Mechanically remove any eventual impurities by vacuuming or using a compressed air blower.



- **Never place any obstacles in front of the ventilation apertures!**

6.2.2 Maintenance

6.2.2.1 Daily maintenance

- During maintenance work, follow the instructions contained in section **6.1 General Safety Measures**.
- After finishing daily operation, turn off the equipment. Remove the foodstuffs from the equipment, clean the refrigerated space and wipe it dry. Leave the refrigerated space open to prevent any lingering odors.
- When performing maintenance work during continuous operation, turn the equipment off, remove any foodstuffs from it and place them in another refrigerated space. Clean the refrigerated space and wipe it dry. Turn the equipment on and let it cool to the target temperature. After that, put back the foodstuffs.
- **While the equipment is turned off, perform maintenance as detailed in sections 6.2.1.1-6.2.1.2 and 6.2.1.8.**

6.2.2.2 Monthly maintenance


- During maintenance work, follow the instructions contained in section **6.1 General Safety Measures**.
- During monthly maintenance perform tasks detailed in sections **6.2.1 Inspection and 6.2.2.1 Daily Maintenance**.

7. Forbidden handling procedures



- Do not use the equipment for other purposes than intended!
- Do not interfere with the circuitry of the equipment!
- Do not perform any other activities forbidden elsewhere in this user guide!
- Do not wash the equipment with pressurized water!
- Do not overload the glass shelves and the drawers in the refrigerated space!
- Do not handle the equipment roughly!
- It is forbidden to operate the equipment without prior training and without having this user guide available!

8. Table of possible malfunctions and their correcting

<i>Malfunction name</i>	<i>Control unit message</i>	<i>Possible correction method</i>
<i>Malfunctioning refrigerated space probe</i>	PF1	Replace thermal probe
<i>Malfunctioning evaporator probe</i>	PF2	Replace thermal probe
<i>Display cabinet not cooling</i>	HiA	Check the display cabinet as per section 6.2 Regular Maintenance. After inspection, turn the equipment on again and let it operate for at least 60 min. If the problem persists, contact a servicing organisation.
<i>Light not working</i>	No message	Check the light by pressing the  button. If the light does not turn on, there is a faulty current transformer 9. Contact a servicing organisation.


9. Inquiries

If you need help and advice, do not hesitate to contact us, and we will assist you with everything. You can find our contact information on our website www.gastro.cz.

Appendix 1


Control unit – Wiring diagram

DIXELL XR60CH

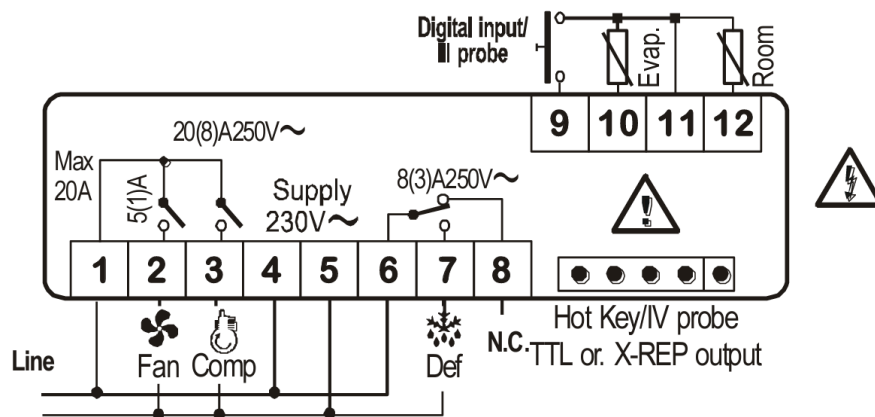


120Vac supply:
connect to the
terminals 5 and 6.

 Cooling showcase BH drop-in EN and GN (1x shelf) – Wiring diagram




 Cooling showcase BH drop-in EN and GN (2x shelf) – Wiring diagram



Appendix 2.3

Cooling showcase BH drop-in EN and GN (3x shelf) – Wiring diagram

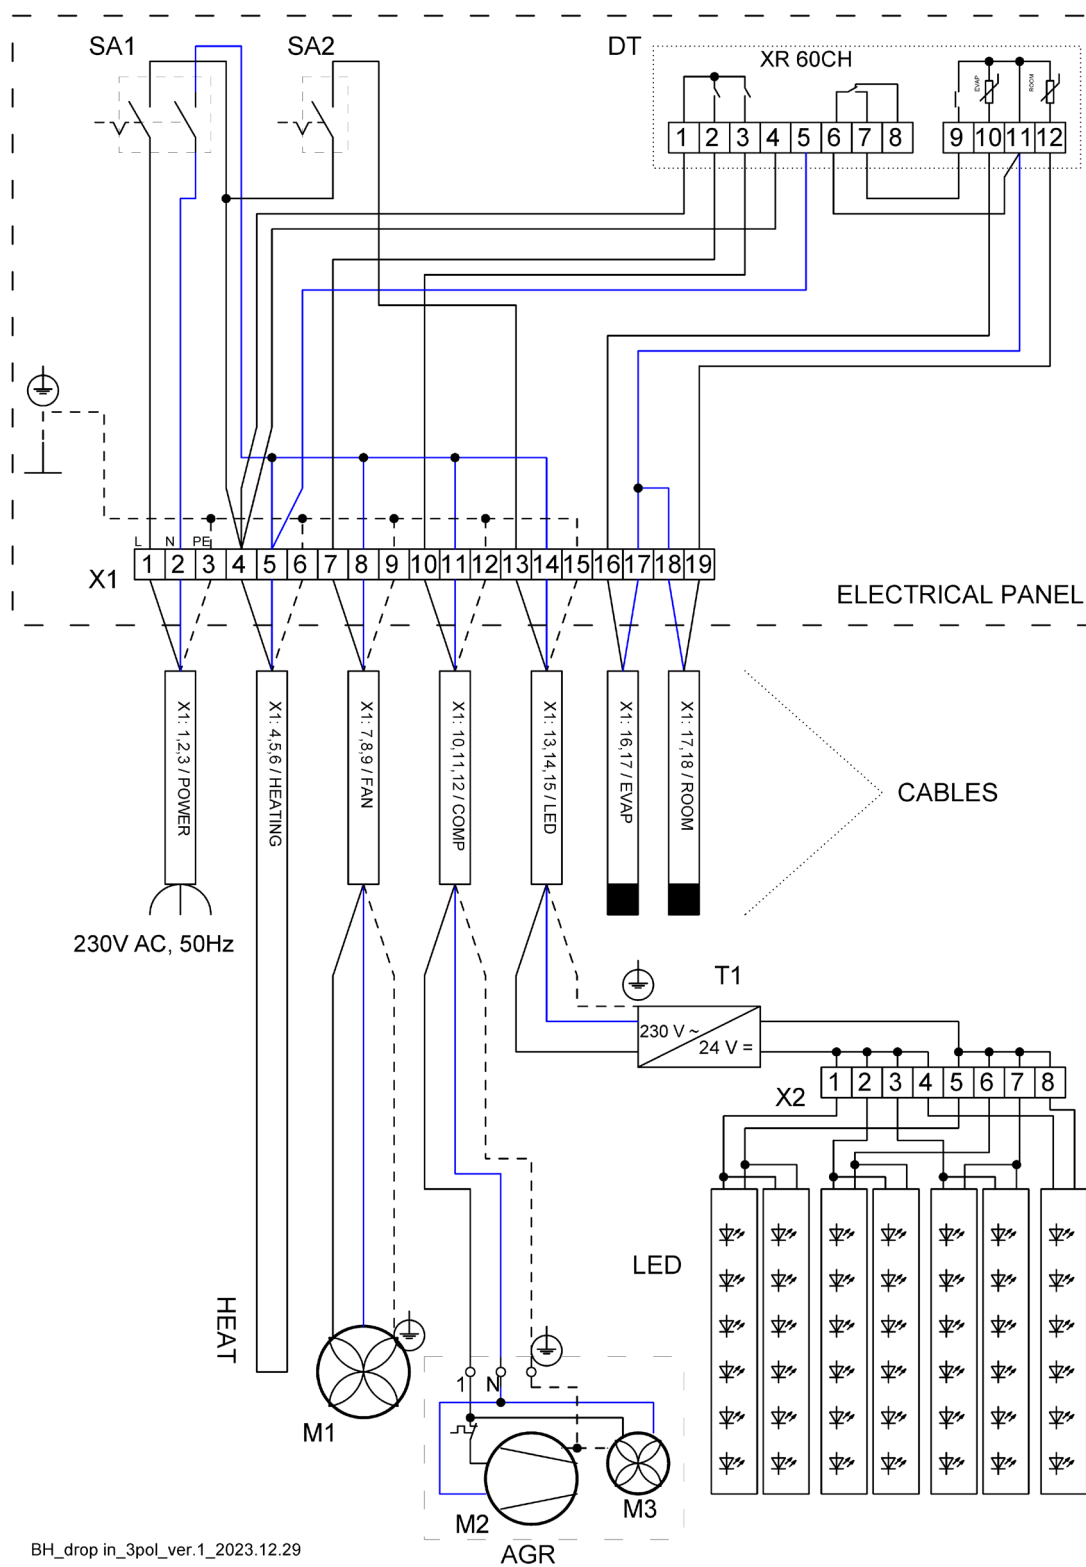

Legend:

SA1 – Main switch

SA2 – Light switch

DT – Control unit

X1 – Connecting terminal block

T1 – LED light source

X2 – LED connecting terminal block

LED – LED light

M1 – evaporator fan motor

AGR - Aggregate


M2 – Compressor motor

M3 – Condenser fan motor

HEAT – Heating under the door

Appendix 2.4

Cooling showcase BH drop-in - Technical drawing

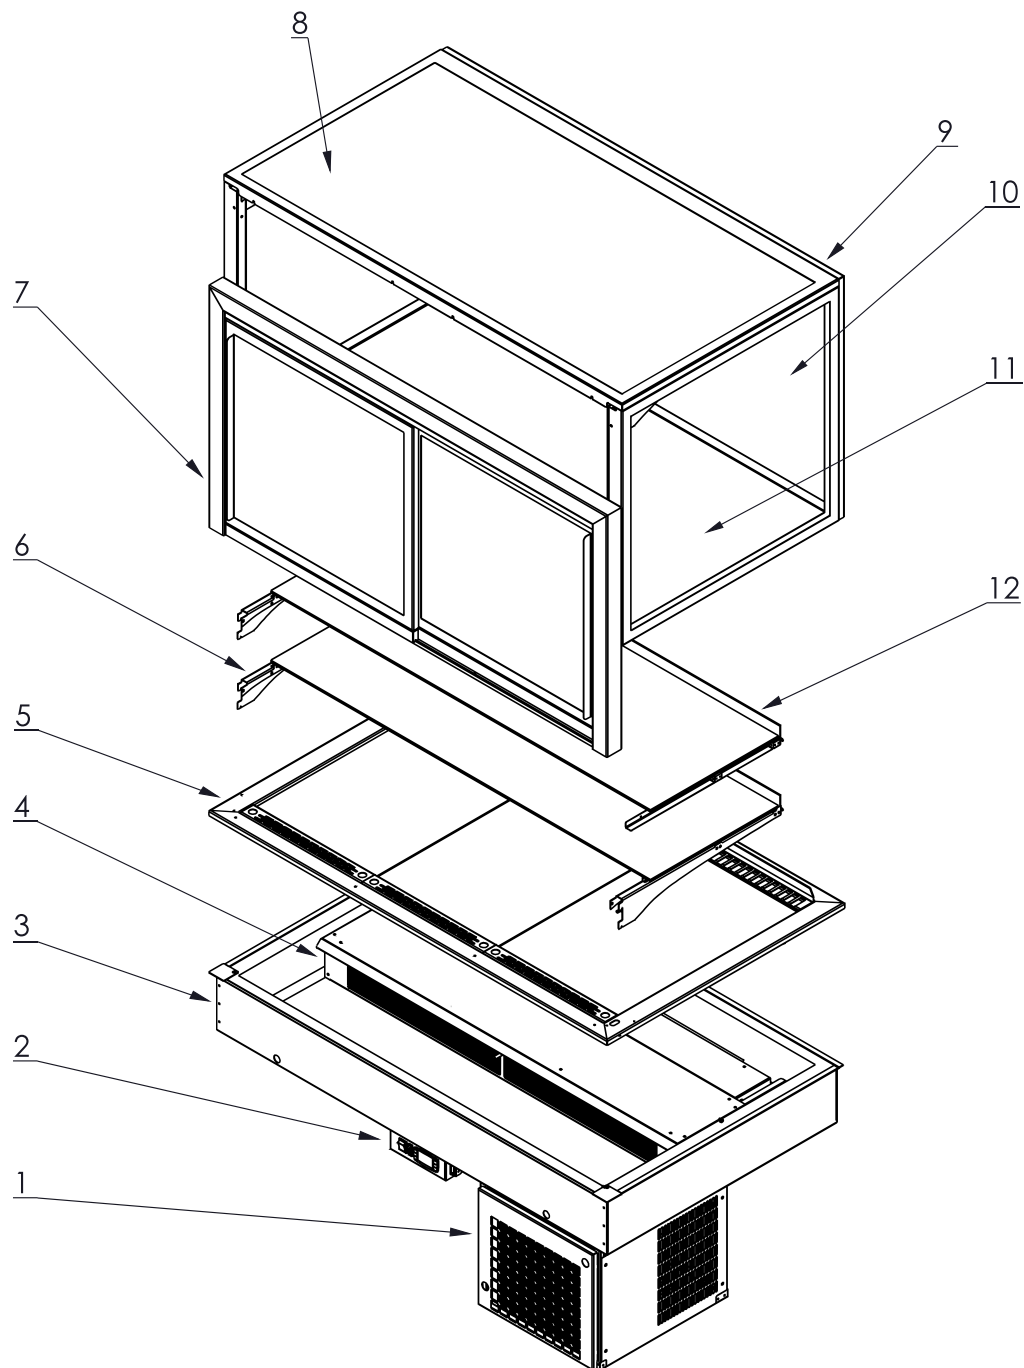

Legend:

1. Aggregate Compressor, Condenser, refrigerant collector,...)
2. Thermostat DIXELL
3. External tub with outlet
4. Evaporator block
5. Cover plate with inhalation and exhalation
6. Glass shelf
7. Glass sliding doors
8. Upper glass
9. Frame construction
10. Front glass
11. Side glass
12. Price tag holder


Appendix 3.1

Cooling showcase DE – Wiring diagram

We are updating the wiring diagram to provide more detailed information. For any questions, please contact us.

Appendix 3.2

Cooling showcase DE - Technical drawing

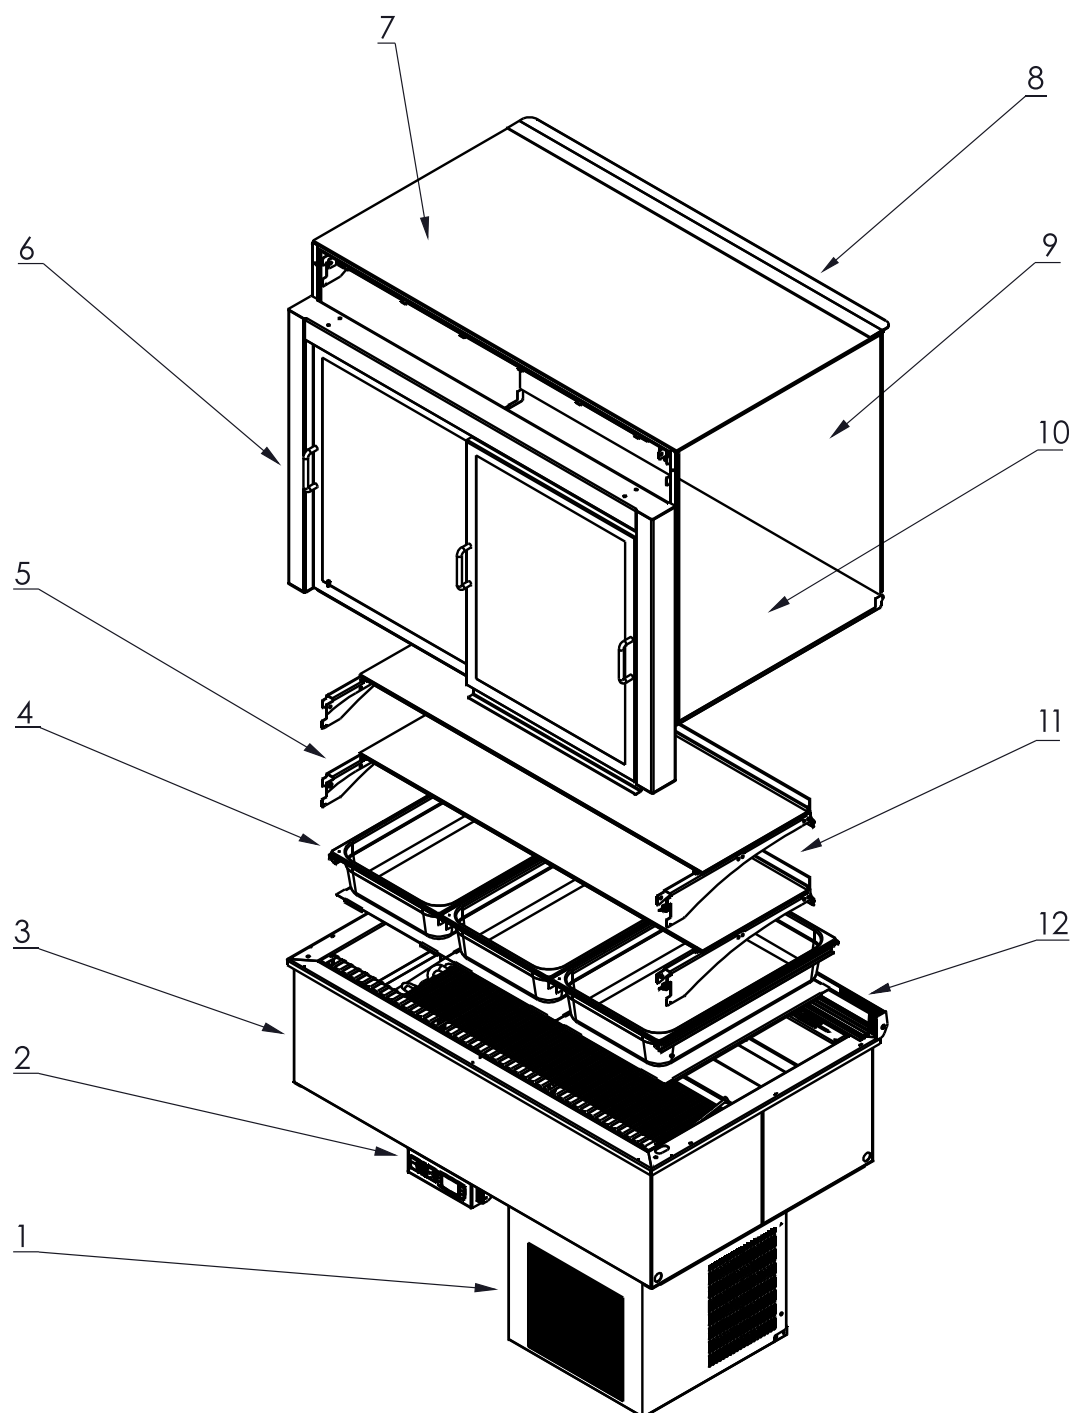

Legend:

1. Aggregate Compressor, Condenser, refrigerant collector,...)
2. Thermostat DIXELL
3. Tub and evaporator block with fans
4. Cover plate and gastro containers GN
5. Glass shelf
6. Glass sliding doors with handle
7. Upper glass
8. Upper bar
9. Front glass
10. Side glass
11. Price tag holder
12. Movable glass bar